

Installation and Debugging Setting

Project debugging

Display the COM number of current indoor unit

Display the address of indoor unit

Searched the on-line indoor unit, display the allocated indoor unit No.

1 2

Long-press combination button for 5s

When the status of indoor unit is stable

Press "enter" button to enter into normal working mode

